


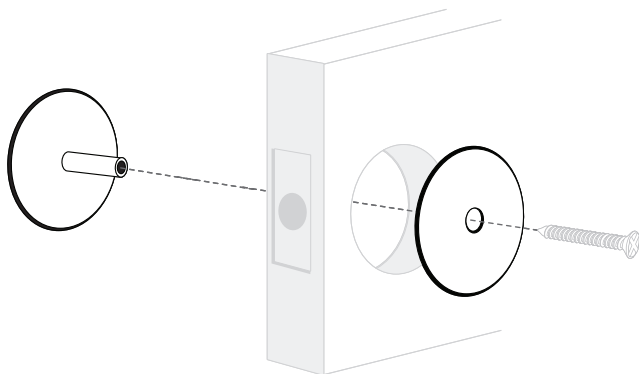

Installation Instructions:

1. Remove the lock from the door.
2. Place the plate with the threaded stem through the outside hole.
3. Screw the inside plate into the outside plate.

Instrucciones de instalación:

1. Remueva la cerradura de la puerta.
2. Introduzca la placa con la rosca por el agujero hacia adentro.
3. Atornille la placa de adentro con la placa de afuera.

Pro-Lok® And Entry Armor™ Are Trademarks Of Weinraub Enterprises, Inc. © 2009. www.ENTRYARMOR.com

Item # EHC-100-PC



☐ **EHC-110-B**
UPC: 638246310104

☐ **EHC-110-C**
UPC: 638246310111

☐ **EHC-110-PC**
UPC: 638246310128