


The LT300 Keycheck is designed to allow you to verify that your are duplicating a customers key on the correct blank. The design of the KeyCheck will allow you to replicate the keyway on the customers key, and to verify that the key blank you have chosen will pass the keyway

- 1 To use the KeyCheck; first, loosen the two screw knobs on the back of the KeyCheck to releases the pressure on the “fingers”.

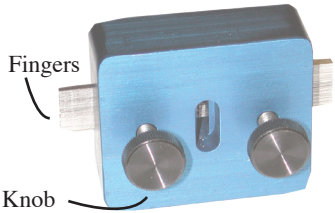

- 2 After loosening the knobs, gently pull the fingers back to create a slot for the customers key the front of the KeyCheck.

- 3 Slide a couple of the fingers over the create a “bottom edge” on which to sit the customers key.



- 4 Push the customer key in the KeyCheck until all of the key cuts are past the fingers. Do not push in the past the key shoulder stop

- 5 Push the fingers in all around the Key. (You can use a small flat blade screwdriver or a small nail to make it easier to push each finger into place.)



- 6 Lightly tighten the screw knobs. Do Not Overtighten, light pressure is all that is required. Remove the customers key to reveal the “keyway”.

- 7 Test the keyblank you have chosen in the keyway you have created. If the key blank passes you have the right blanks

